 
 


## Guide to using VTR 2 Channels 3 and 4

1. Press the button on the front of VTR-2 labeled “Audio Rec Select.” This will switch the VTR to four channel audio mode. Make sure you change this setting back at the end of your shoot.

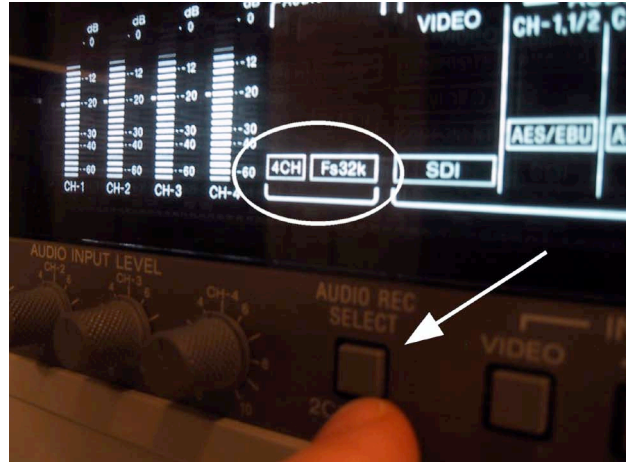

2. Press the select button for the channel that you wish to send to channel three or four.

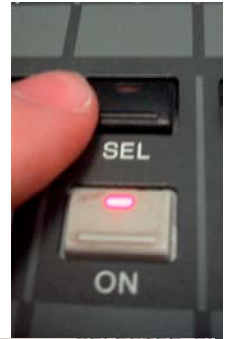

3. In the “Routing” section of the board, press 3 or 4 (or both) to send channel to the corresponding channel on the VTR. You can also press the “ST” button to prevent the signal from going out over the Master output. You may assign as many channels as you want to 3 and 4.

