


Guide to Displaying a Still Image on the Synergy 2 Switcher

Please refer to the related guide for loading images onto the Synergy 2 switcher. There are three GlobalStore still-store units within the Synergy 2 MD. Each can hold a different image. If you are using a still image with an alpha layer (transparency), you must use GlobalStore 1.


1. Press the crosspoint for the GlobalStore you wish to use twice. You may do this in any bus.



2. The screen will now be displaying the GlobalStore menu. Press the F1 key below the screen to bring up the Select/Manage display.

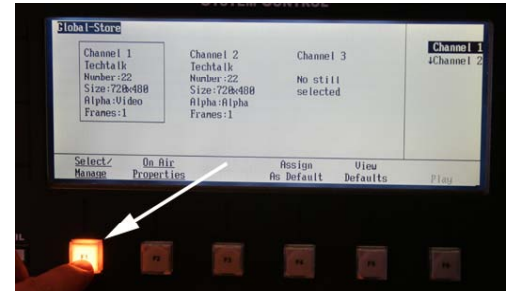

3. Use the middle knob to the right of the screen to navigate to the image you wish to load. If you need to enter a folder (denoted by a name with a backslash after it), highlight the folder and then press the F1 key.

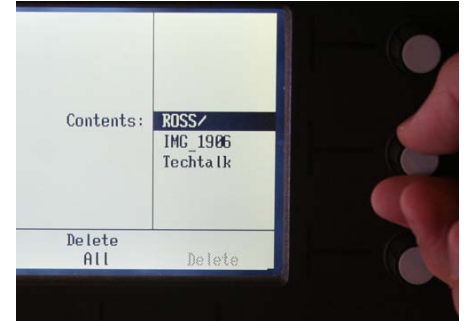

4. Press the F1 key to load the image. There will be a brief delay and then the screen should return to the main GlobalStore screen. You may then access that GlobalStore from either MLE or the AUX bus.

